

ATTENTION INSTALLER

BEFORE STARTING

1. REPLACE THE OIL FILTER
2. FILL ENGINE WITH OIL
3. PRESSURIZE THE OIL SYSTEM

Failure to do so may void warranty